



## Lightbeam-301

### About your KeyStrobe-lightbeam 301


Your KeyStrobe-lightbeam 301 is designed to replace one of the front fitting bolts of your Garrard 301. It is only suitable for use with 301s with platter strobe markings.

### Fitting:




**Disconnect power first!**

Remove one of the front mounting bolts and pass the *-lightbeam* bolt through the hole. Use the dished washer on the top side. Fit the nylon washer, the metal washer and then the nut. Tighten the nut while holding the top dome by hand.

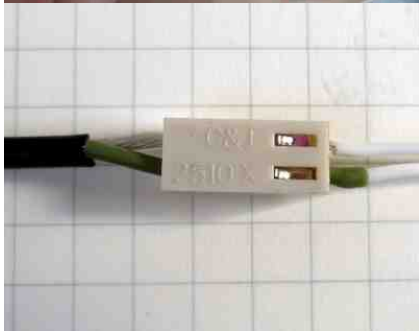

Ensure that the LED points directly towards the platter. Avoid grasping the dome with any tools.

Push the each of white *-lightbeam* wires into the white connector receptacle, noting the green polarity marking on the wires. Fold back the wires and use a cable tie to secure.

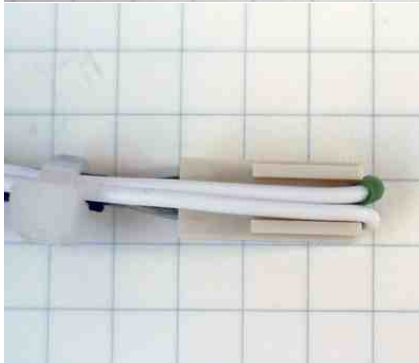


Set the Pulser frequency switch to match your platter. The switch position has varied with Pulser models but is marked on the label.

Mount the *-pulser* unit in a convenient place. If under plinth, choose the rear left corner if possible. Plug in mains and LED connectors.

Apply power and run turntable to check performance.

**Only if you are electrically competent, you can power the *-pulser* from the switched supply to the motor.**

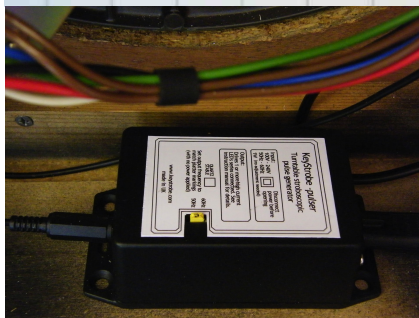

Web:  
<http://www.keystrobe.com>  
<http://www.keystrobe.co.uk>

Email:  
[keystrobe\\_sales@mac.com](mailto:keystrobe_sales@mac.com)