




## KeyStrobe-*duo*

Your KeyStrobe-*duo* will normally be set to the correct frequency before dispatch.

If you wish to change the setting, split apart the casing at the key-ring end using a flat-blade and set the switch to 50Hz or 60Hz as shown:

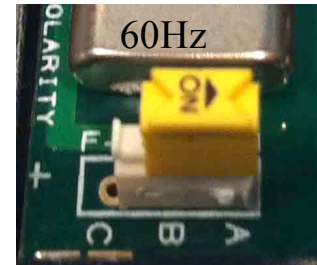

### Using your KeyStrobe-*duo*:

Point the KeyStrobe-*duo* at the strobe markings and press the button. The markings for the speed set (e.g. 33 1/3 RPM) should appear stationary in the strobe light. Any movement will indicate a turntable speed error. If the turntable has a speed adjustment control, this may be used to correctly set the speed. If the turntable has no speed adjustment control and a speed error is noticed, then a fault condition exists.

N.B. Some turntables take a little while for their speed to become accurate.

### Strobe Discs:

Strobe discs are available from KeyStrobe. If you do not have a strobe disc, you can print a temporary one free from the link below and navigate to "Downloads"

### Battery:

The small green LED indicates battery condition. When this goes out or dims, it's time to change the battery. Use a 12v GP23A battery. Correct battery polarity is marked on the Printed Circuit Board.

### Service:

Your KeyStrobe has been carefully designed and built in the UK using quality components and should give long and trouble free service. It is warranted for 12 months from date of supply. If you have any difficulty with it, please try a new battery first (making sure the polarity is the same as marked on the printed circuit board). If that does not cure the problem, please email for advice and return postal address.

Web:

<http://www.keystrobe.com>

<http://www.keystrobe.co.uk>

email:

[keystrobe\\_sales@mac.com](mailto:keystrobe_sales@mac.com)